COMPAQ

USB Scrolling Optical Mini Mouse

Owner's Manual

Please read before using this equipment.

❒ Contents

Features 3
System Requirements 4
FCC Declaration of Conformity 5
The FCC Wants You to Know 6

Installation 8
Hardware 8
Software 9

Operation 10
Using the Wheel 10
Using Hyper Grid 11
Using Auto Scroll 14
Using Zoom 14

Troubleshooting 15

Care 17

© 2001, 2002 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.
Compaq is registered by the U.S. Patent and Trademark Office.

❒ *Features*

Your Compaq USB Scrolling Optical Mini Mouse is designed specifically for notebook PCs or PCs with a universal serial bus (USB) port. You can scroll, zoom, or click using the mouse's scroll wheel and programmable buttons.

Optical Sensing Technology — senses mouse movement precisely and smoothly, with no moving parts to clean or replace.

USB Connector — lets you easily connect the mouse to your notebook computer's USB port.

Compact Size — your mouse is convenient to carry with your notebook computer.

Simple 2-Button Design — combined with the scroll wheel, you can easily use your mouse with your other notebook computer accessories.

Scroll Wheel — lets you scroll and select quickly and easily, helping you work with long documents.

True 400 DPI (Dots per Inch) Resolution — you can easily use the mouse with a monitor that supports 1024 × 768 resolution and up, letting you move your mouse fluidly across higher resolution monitors.

Supplied Driver Diskette — lets you quickly configure your mouse with almost any IBM-compatible computer.

SYSTEM REQUIREMENTS

- IBM, PC or compatible with one available USB port
- 3.5-inch floppy disk drive
- Microsoft Windows, 98, 2000, ME, XP

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	USB Scrolling Optical Mini Mouse
Model:	Cat. No. 26-555
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your mouse.

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

❒ Installation

HARDWARE

You do not need to turn off the computer before connecting or disconnecting your mouse.

To connect the mouse to your computer, disconnect any mouse already connected to your computer's USB port, then plug the mouse's rectangular plug into the port. In most cases, the computer automatically detects the mouse and prompts you to install the mouse's driver, supplied with the Mouse Suite software (see "Software" on Page 9).

Notes:

- Refer to your computer's owner's manual for the location of the USB port.
- The mouse only works with a USB port. Do not use a serial port adapter.

SOFTWARE

To use all of the features of your new mouse, you might have to manually install the supplied Mouse Suite software onto your computer.

Important:

- Your computer might automatically prompt you to install the mouse's driver and Mouse Suite software. If this happens, follow the instructions on the screen and the *readme.txt* file included with the software instead of the instructions on Page 10, then restart your computer when the installation is finished.

- Before installing the Mouse Suite software, be sure to quit all applications.

If necessary, follow these steps to manually install the Mouse Suite software on your computer.

1. Insert the Mouse Suite software setup disk into your floppy disk drive.
2. Click **Start** on the task bar, then click **Run**.
3. In the *Run* dialog box, type **<drive>:\setup**. (For example, if the software setup disk is in drive A, type **a:\setup**.)
4. Click **OK** in the *Run* dialog box.
5. Follow the instructions that appear.

❒ *Operation*

USING THE WHEEL

Most applications use a scroll function to move through text. Your mouse's wheel makes scrolling easier on your hand and wrist by letting you move your view of the window you are using with just your fingertip.

Important: Although Universal Scrolling is enabled by default in your mouse's software, you might have to manually enable it in order to use scrolling functions in applications not compatible with Microsoft Office 97. See "Using Auto Scroll" on Page 14.

To scroll, rotate the wheel forward or backward. To select, press the wheel down.

USING HYPER GRID

You can use the Hyper Grid software supplied with your mouse to set up the mouse so it quickly executes commonly-used commands. To use Hyper Grid, hold down the mouse button you selected when you installed Mouse Suite to display the grid. Then, while holding the button, move the pointer to an icon on the grid then release the button to execute the command associated with that icon.

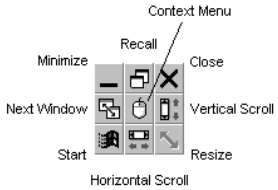

Note: The Hyper Grid software automatically grays out functions that you cannot use with the software you are using.

Hyper Grid lets you use the mouse to quickly execute the following commands.

Minimize — minimizes the active window.

Recall — restores/maximizes the active window.

Close — closes the active window.

Next Window — makes the next window active.

Context Menu — emulates the right mouse button.

Vertical Scroll — scrolls document vertically.

Start — activates the Windows Start menu.

Horizontal Scroll — scrolls document horizontally.

Resize — jumps to the size grid to resize the active window. Simply press one of the mouse's buttons to cancel this command.

Notes:

- The Vertical Scroll and Horizontal Scroll commands let you set the mouse so it does not scroll automatically. If you select these commands, you must move the mouse to scroll it. Simply press either of the mouse's buttons to cancel either of these commands.
- Selecting the Context command lets you select the Context menu, even if you programmed the right mouse button to minimize windows.

USING AUTO SCROLL

Your mouse's auto scroll function lets you automatically scroll through a document without having to move the mouse or mouse wheel. You can select auto scroll using either of the mouse's buttons or the wheel.

To scroll in a document, make sure Quick/Auto Scroll is set, then press the wheel. appears at your pointer position. To start auto scrolling, move your pointer vertically, horizontally, or diagonally away from the origin mark. Auto scroll speed increases as the pointer is moved away from the origin mark.

To stop auto scroll, press any mouse button or rotate the wheel.

USING ZOOM

In some Microsoft Office 97 compatible applications (such as Microsoft Word 97), additional zooming functions are available. You can use

the *zooming* function to “zoom in” for a closer look at a page or “zoom out” to see more of a page.

To zoom in, hold down **Ctrl** and rotate the mouse wheel forward. To zoom out, hold down **Ctrl** and rotate the mouse wheel backward.

❒ *Troubleshooting*

If your mouse is not working as it should, these suggestions might help you eliminate the problem. If the mouse still does not operate properly, take it to your local RadioShack store for assistance.

Why isn’t the pointer moving smoothly?

- The surface where you are using the mouse might be unsuitable. For best results, avoid using the mouse on transparent glass or on shiny material.

- The sensor on the bottom of your mouse might require cleaning. Simply wipe the sensor with a soft cloth to clean it.

Why aren't the scrolling functions of my mouse working with my notebook?

You might need to disable the trackball or touchpad in your notebook's BIOS and enable the external port in order to successfully use all of your mouse's functions.

The mouse was not detected by my computer.

- Make sure the mouse is securely plugged into your computer's USB port.
- Check if your PC's USB port is working properly. Look on the *Device Manager* page of *System Properties*. If there is a circled exclamation point through the icon, it means this USB controller has some problem. Try to remove and install it again or contact your PC manufacturer's technical support.

- Check the version of your operating system. If you are not running Windows 98 or Windows 2000, update your operating system so the USB device can be enabled.

- Make sure the USB port was enabled in the BIOS setup.

Why isn't there a pointer on the screen? *or* **Why isn't the pointer responding to the mouse's movement?**

Your computer did not detect the mouse. Make sure your mouse's cable is properly connected to the correct port.

❒ *Care*

To enjoy your Compaq USB Scrolling Optical Mini Mouse for a long time:

- Keep the mouse dry. If it gets wet, wipe it dry immediately.

- Use and store the mouse only in normal temperature environments.
- Handle the mouse gently and carefully. Do not drop it.
- Keep the mouse away from dust and dirt.
- Wipe the mouse with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the mouse's internal components can cause a malfunction and might invalidate its warranty. If your mouse is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the *(continued)*

(continued)

product made after the expiration of the warranty period. This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor,
Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

26-555
02A02
Printed in China